




**STEP 1**  
LIGHTLY TAP PYRAMID CAP  
EDGE UPWARD TO REMOVE

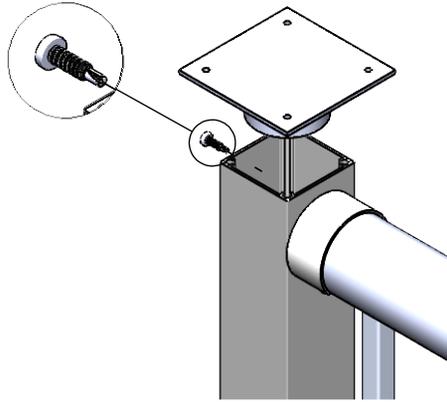


**STEP 2**  
FASTEN POST ADAPTERS  
(#10X3/4 TEK SCREW)

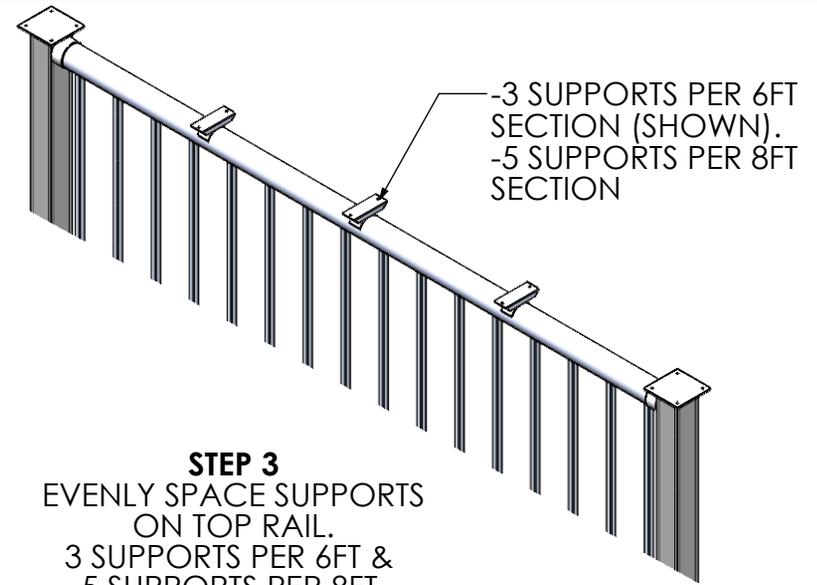

**STEP 3**  
EVENLY SPACE SUPPORTS  
ON TOP RAIL.  
3 SUPPORTS PER 6FT &  
5 SUPPORTS PER 8FT  
(#10X1/2 SCREW)

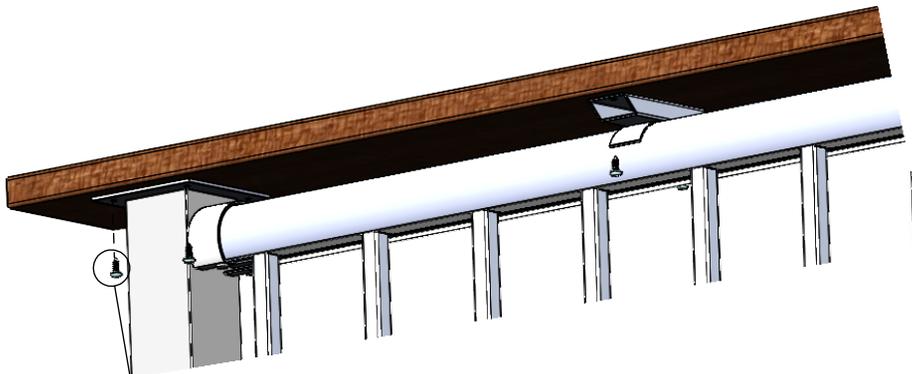

**STEP 4**  
FASTEN DRINK RAIL TO POST  
ADAPTERS AND SUPPORTS  
(#10x1/2 SCREW)  
SCALE 1 : 6

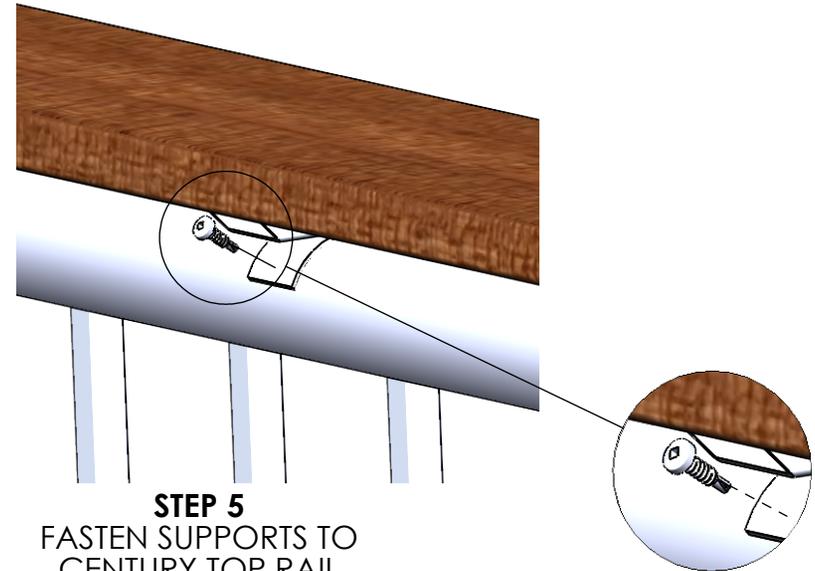

**STEP 5**  
FASTEN SUPPORTS TO  
CENTURY TOP RAIL  
(#10X3/4 TEK SCREW)



**PROPRIETARY AND CONFIDENTIAL**  
THE INFORMATION CONTAINED IN THIS  
DRAWING IS THE SOLE PROPERTY OF  
CENDEK RAILINGS LTD. ANY REPRODUCTION IN PART  
OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION  
OF CENDEK RAILINGS LTD IS PROHIBITED.

DRAWN BY	
CREATED	2/22/2018
MATERIAL	
DIE NO.	
ALL DIMENSION IN INCHES/mm	

<b>DESCRIPTION</b>	
Drink Rail Adapter Kit (DRAK) Install Instructions	
Part No. 8004-KIT-40050	Eng No. 1018A
Weight	lbs
SHEET 1 OF 1	Rev

**REVISIONS**

REV.	DESCRIPTION	DATE	INITIALS